

2-COLOUR-SCREEN CHROMATIC\GUITAR\BASS  
TUNER

**AT-200B**

**OWNER'S MANUAL**

Thank you for purchasing the Aroma CHROMATIC\  
GUITAR\BASS TUNER AT-200B.

**AROMA**


Aroma Music Co., Ltd.

© 2011 Aroma Music Co., Ltd.

### Precautions

- Avoid use in direct sunlight, extreme temperature or humidity, excessive dust, dirt or vibration or close to magnetic fields.
- Be sure to power off the unit when not in use and remove the battery for extended periods of inactivity.
- Radios and televisions placed nearby may experience reception interference.
- To avoid damage, do not apply excessive force to the switches or controls.
- For cleaning, wipe with a clean, dry cloth. Do not use flammable liquid cleaners such as benzene or thinner.
- To avoid damage fire, or electrical shock, do not place liquids near this equipment.

### Controls and functions

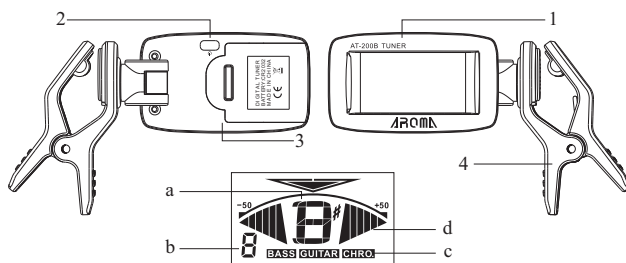

1. Display: a. Note name ( Chromatic/Guitar/Bass )  
b. String number ( Guitar/Bass )  
c. Tuning item      d. Meter
2. Power button ( press and hold 2 seconds ) & Tuning items switch
3. Battery Compartment
4. Clip

### Specifications

Tuning item	: Chromatic, Guitar, Bass
Detection range	:AO ( 27.5Hz )-C8 (4186.00Hz)
Tuning way	: Clip ( tune by vibration )
Detection accuracy	: ± 0.5 cent
Power supply	: one 2032 coin battery
Dimensions	: 80mm×48mm×27mm
Weight	: 23g
Included items	: Owner's Manual, one 2032 coin battery

### Tuning procedure

1. Press the power button and hold 2 seconds to turn on (off) the tuner.
  2. Press the power button continuously to select tuning item out of Chromatic, Guitar, and Bass.
  3. Clip the tuner onto your instrument.
  4. Play a single note on your instrument, the note name (and string number) will appear in the display. The screen colour will change. And the meter moves.
    - The screen turns green; and the center triangle appears: note in tune
    - The screen turns red; and meters in the left of note name appear: flat note
    - The screen turns red; and meters in the right of note name appear: sharp note
- \* In Chromatic mode, the display shows the note name.  
\* In Guitar and Bass mode, the display shows the string number and the note name.

### Power saving function

If there is no signal inputs in 3 minutes after the power is on, the tuner will turn off automatically.

### Installing the battery

Pressing on the cover as marked in the back of the product, open the case, insert a CR2032 coin battery being careful to observe the correct polarity. Battery life may differ according to the conditions of use. If the unit malfunctions, and turning the power OFF and then ON does not resolve the problem, please remove and wait for 3 minutes to reinstall the battery.