183mm

CHROMATIC\GUITAR\BASS\UKULELE\VIOLIN TUNER

AT-330 **OWNER' S MANUAL**

Thank you for purchasing the Aroma CHROMATIC\ GUITAR\BASS\UKULELE\VIOLIN TUNER AT-330.

Aroma Music Co., Ltd.
Bao'an District, Shenzhen City, Guangdong, P.R.China

© 2011 Aroma Music Co., Ltd. www.aromamusic.cn

Precautions

- Avoid use in direct sunlight, extreme temperature or humidity, excessive dust, dirt or vibration or close to magnetic fields.
- Be sure to power off the unit when not in use and remove the battery for extended periods of inactivity.
- Radios and televisions placed nearby may experience reception interference.
- To avoid damage, do not apply excessive force to the switches or controls.
- For cleaning, wipe with a clean, dry cloth. Do not use flammable liquid cleaners such as benzene or thinner.
- To avoid damage fire, or electrical shock, do not place liquids near this equipment.

Controls and functions

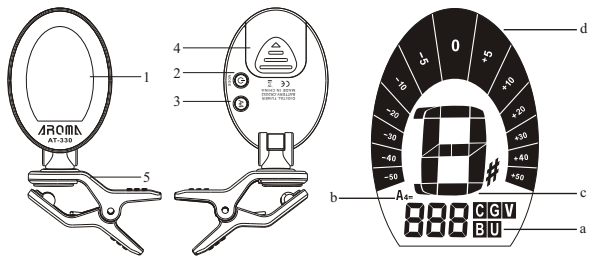

1. Display: a. Tuning mode (C\G\V\B\U) b. Pitch
   c. Note name d. Colour meter
2. Power button (press and hold 2 seconds to turn on/off power) & Mode button (continuous single press to choose tuning mode)
3. Pitch Adjust button
4. Battery Compartmen
5. Clip

Specifications

Tuning item : Chromatic, Guitar, Bass, Ukulele, Violin
Pitch range : 435 Hz - 445Hz
Tuning way : Clip (tune by vibration)
Detection accuracy: ± 0.5 cent
Power supply : one 2032 coin battery
Dimensions : 85mm×53mm×26mm
Weight : 25g
Included items : Owner's Manual, one 2032 coin battery

Tuning procedure

1. Press the power button and hold 2 seconds to turn on (off) the tuner.
2. Select tuning mode
   Press the power/mode button continuousely to select tuning mode out of Chromatic (C), Guitar (G), Violin (V), Bass (B) and Ukulele (U).
   - Under Chromatic (C) mode, the display only shows note name when tuning.
   - Under Guitar (G), Violin (V), Bass (B) and Ukulele (U) modes, the display shows note name and string number when tuning.
3. Select pitch
   If you want to change pitch, please press the pitch button. The pitch ranges from 435Hz to 445Hz.
4. After all the selections, please clip the tuner onto your instrument. And adjust the clipping positon and tuner viewing angle to well read the tuner screen.
5. Play a single note on your instrument, the note name (and string number) will appear in the display.
   Green colour meter stands in the middle: note in tune
   Yellow colour meters point in the left: flat note
   Red colour meters point in the right: sharp note

Power saving function

If there is no signal inputs in 3 minutes after the power is on, the tuner will turn off automatically.

Installing the battery

Press and open the battery compartment cover in the back, insert a 2032 button battery being careful to observe the correct polarity. Battery life may differ according to the conditions of use. If the unit malfunctions, and turning the power OFF and then ON does not resolve the problem, remove and then reinstall the battery.

188mm

成品尺寸：183*188mm